

Fuji X Mirrorless Cameras					
Lensbaby Lens	X-T1* X-T2* X-T3* X-H1*	X-T10* X-T20* X-T100* X-Pro1* X-Pro2*	X-E1* X-E2* X-E2S* X-E3*	X-M1*	X-A1* X-A2* X-A3* X-A5* X-A10*
Burnside 35	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Velvet 56 SE	N/A	N/A	N/A	N/A	N/A
Velvet 56	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Velvet 85	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Circular Fisheye	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Trio 28	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Twist 60	N/A	N/A	N/A	N/A	N/A
Composer Pro II with Sweet 35 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Composer Pro II with Sweet 50 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Composer Pro II with Sweet 80 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Composer Pro II with Edge 35 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Composer Pro II with Edge 50 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Sol 45	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Sol 22	N/A	N/A	N/A	N/A	N/A
Spark	N/A	N/A	N/A	N/A	N/A
Discontinued					
Composer Pro II with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A
Composer Pro with Sweet 35 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Composer Pro with Sweet 50 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Composer Pro with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A
Composer Pro with Double Glass Optic	N/A	N/A	N/A	N/A	N/A
Muse	N/A	N/A	N/A	N/A	N/A
Scout	N/A	N/A	N/A	N/A	N/A
Composer	N/A	N/A	N/A	N/A	N/A
Control Freak	N/A	N/A	N/A	N/A	N/A
Composer with Tilt Transformer	N/A	N/A	N/A	N/A	N/A
Tilt Transformer	N/A	N/A	N/A	N/A	N/A

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.

* These cameras have a shutter lock that will need to be turned off. To disable the shutter lock go to the Shooting Menu on your camera, select Shoot Without Lens and select enable.